

MOUNTING INSTRUCTIONS



55lbs max.

14" - 37" max.

Electric Specification


- Input voltage: AC 110-260V
- Input current: 0.3A
- Input frequency: 50-60Hz
- Output voltage: DC 12V
- Output current: Max. 1A

Motor


Item	Voltage	Current (No Load)	Current (Rated load)	Operating Temperature
Motor	DC 12V	≤0.3A	≤0.6A	-20°C ~ 50°C

◆ Parts Included

A

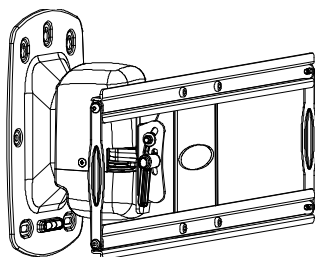

B x2

 




 














*



*




C	D	E	F	G	H	I
 M4 (x4)	 M5 (x4)	 M6 (x4)	 M8 (x4)	 M6 (x4)	 M6x50 (x5)	 velcro tab (x1)
 M4x12 (x4)	 M5x12 (x4)	 M6x12 (x4)	 M8x16 (x4)	 13X5.5X16 (x4)	 Φ8x40 (x5)	
 M4x30 (x4)	 M5x30 (x4)	 M6x35 (x4)	 M8x40 (x4)	 18X8.5X22 (x4)		

◆ Tools Required (Not Included)





◆ Installation


①



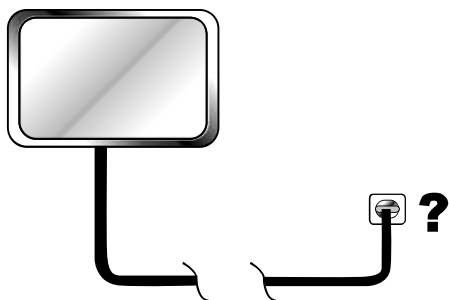


②

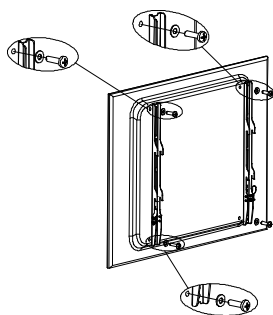 


OR

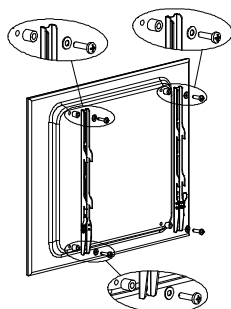


 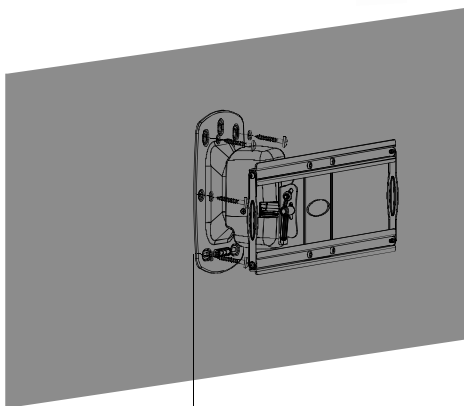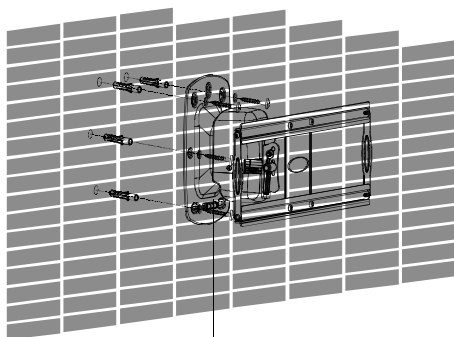

With the help of an assistant, and using the level to ensure the wall plate is level, position the wall plate against the wall in the desired mounting location.

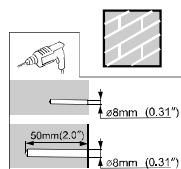


With the help of an assistant, and using the level to ensure the wall plate is level, position the wall plate against the wall in the desired mounting location.

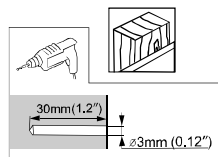

④




4.1

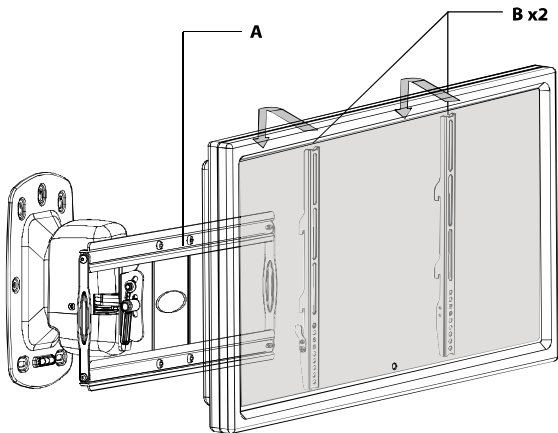


Hook the TV Brackets (with TV set) to the bars of Part A.

4.2

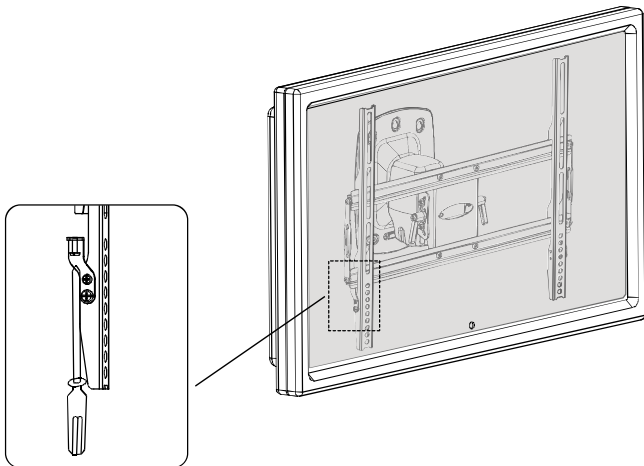

The lock designed feature can prevent your television from being removed from the crossbar. First, put the security lock in place, then tighten the bolt with screw driver by turning clockwise until tight (See illustration).


4.3

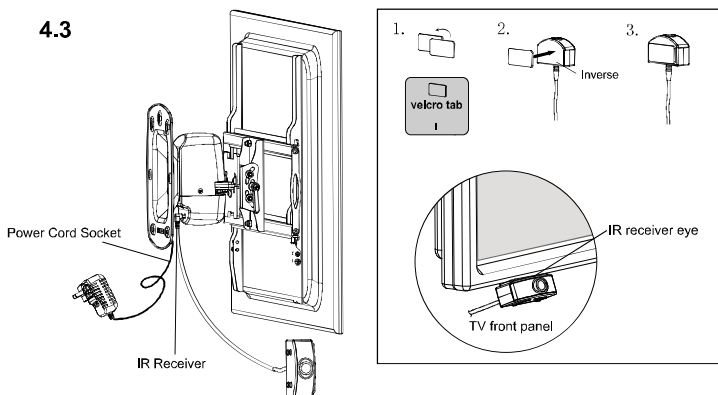

Plug the mount power cord into power outlet. Attach IR Receiver to TV: Using the provided Velcro tab, adhere the IR receiver eye-piece to the TV front panel so it has a clear line of sight with the remote control. (Fig. 6)

◆ Function and Operation


This mount has function of tilt and swivel. It can be adjusted by remote control to get optimal viewing by pitching up 15 or pitching down 15°, and turning left 15° or turning right 15°, up/down by approx 2 degrees.

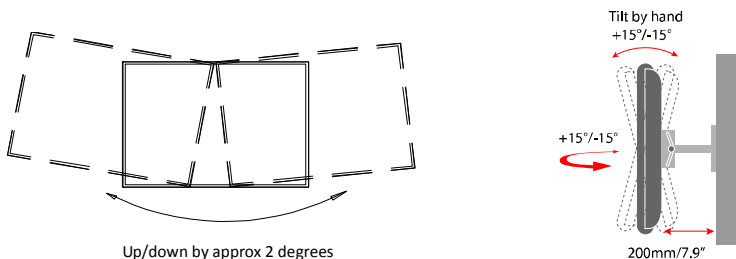

◆ Left / right and preference



Note: The factory settings are made for the maximum left and right stop positions ($\pm 15^\circ$) and for the preference position: screen parallel to the fixation wall (in the fixation enter). You may adjust other stop (left, right) positions another preference position to restrict the movement of the screen during rotation, to prevent collision with objects around it and provide for optimum visual comfort. The remote control has a range of 10m.

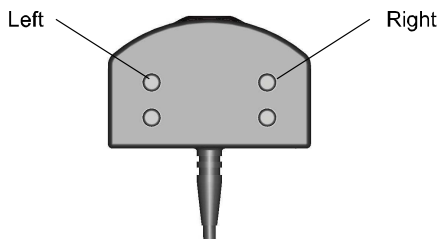

In case you do not find the remote control or loss it, you can adjust the left/right position by pressing the button on the received directly. Please see the picture.

◆ Left / right and preference

• plug in the mount power supply cable. The buzzer will make a buzzing sound. Inform the whole machine is under working.

• The TV-set will turn to the preference position (0°) automatically when press the Display Center arrows (← / →). The buzzer will make a buzzing sound.

• Press the Display Left arrows (←) until the desired position has been reached. It will stop when turn to 15° with the buzzer's suggestive sound. If you keep pressing the left, the buzzer will keep buzzing, but the machine will not move.

• Press the Display Right arrows (→) until the desired position has been reached. It will stop when turn to 15° with the buzzer's suggestive sound. If you keep pressing the left, the buzzer will keep buzzing, but the machine will not move.

• Protection: Please make sure the machine is not over loaded to avoid the unnecessary product damage or the person harm.

◆ Maintenance

- Do not use corrosive agent of alcohol or chemical cloth to clean the product!
- Temperature and humidity condition: -20°C ~ +50°C.

◆ Tips

• Contact between display and wall can cause damage to equipment. Allow some clearance between display and wall when setting display travel limit.

• Before turning on the power, make sure all the screws are fixed bracket and TV screen have been installed correctly according the user's manual.

- Do not disassemble the product to repair by yourself, warranty for electricity is void after disassembling!
- After you installed the apparatus, please check the expansion screws and all fastening devices every 3 months.
- PINCH HAZARD! FINGERS OR HANDS BETWEEN MOVING PARTS CAN LEAD TO SEVERE PERSONAL INJURY!
- Keep fingers and hands away from mount lift arms when operating.